


Battery Status Indicator board mechanical installation for the PFR-3

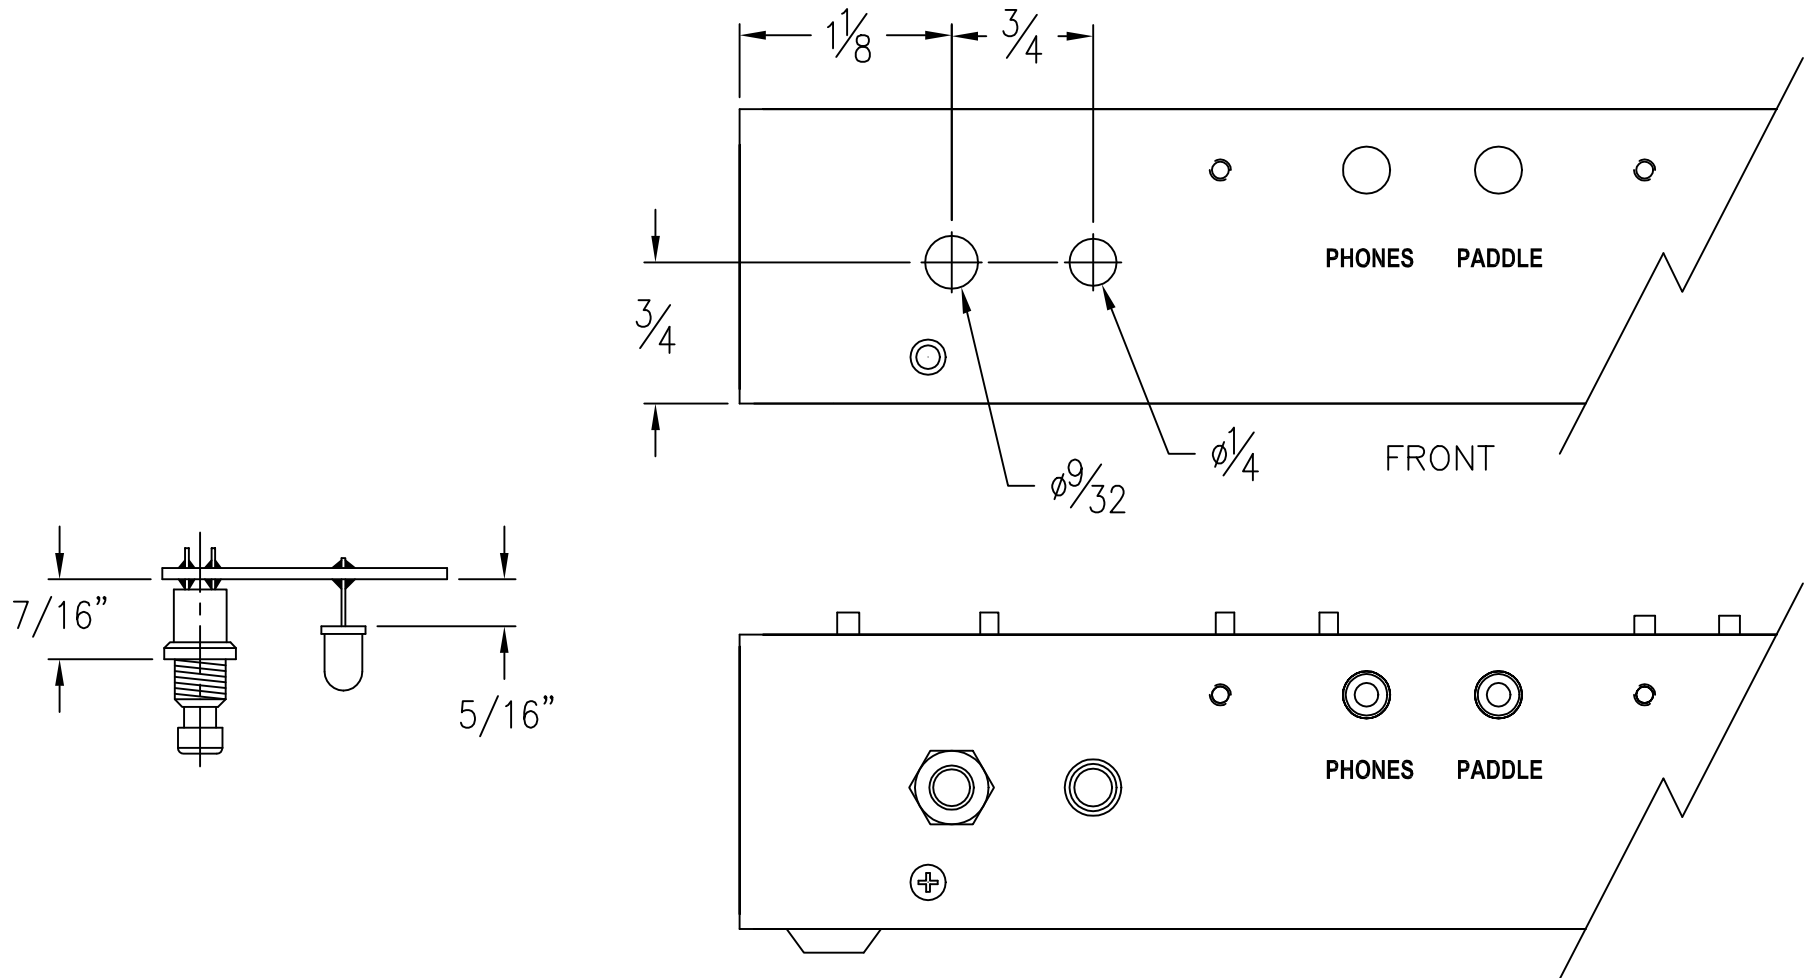

- 1 - Solder the switch and LED to the dimensions shown away from the surface of the BSI board.
- 2 - Remove your main pcb from the upper chassis half and carefully drill the two holes as shown above.
- 3 - Install the LED clip from the outside, and place your completed BSI board, on the inside, in your two drilled holes.
- 4 - Re-install the main pcb, install the push button switch nut, and lock the LED into the clip.
- 5 - Connect two wires from the BSI board to the battery holder terminals, observing polarity.
- 6 - Re-assemble the two chassis halves.